

URS-1 Door reversal

These instructions are to assist in changing a URS-1 refrigerator from being hinged on the right side, to being hinged on the left. The illustrations shown on the next page, illustrate a right hand hinged door.

NOTE: DO NOT TIP THE REFRIGERATOR DURING THIS PROCESS.

1. Remove the door by removing the 4 screws (2 per hinge) which attach the hinges to the door. Take care not to drop or otherwise damage the door. Keep the screws for later use.
2. Carefully remove the 4 plastic plugs on the front left side of the refrigerator and keep them for later use.
3. Remove the hinges from the refrigerator body by removing the 4 screws (2 per hinge) holding the hinges in place. Keep the screws for later use.
4. Reattach the hinges to the refrigerator body but on the opposite side, using the same 4 screws.
5. Remove the light switch depressor from the inside top of the door and reposition it to the inside bottom of the door. Replace the screws into the unused holes to keep out dirt.
6. Rotate the door 180° from its original orientation. The handle will now be on the right side of the door. What was the bottom of the door has now become the top.
7. Attach the door to the hinges, using the 4 original screws.
8. Plug the 4 hinge mounting holes, on the right side of the refrigerator body, using the 4 plastic plugs saved from step 2.



TOP HINGE



TOP LEFT
HINGE HOLES



BOTTOM LEFT
HINGE HOLES



BOTTOM HINGE



SWITCH
DEPRESSOR